


INSTRUCTIONS


H17 & H17XL INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

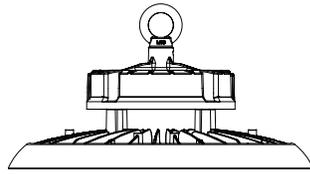

H17

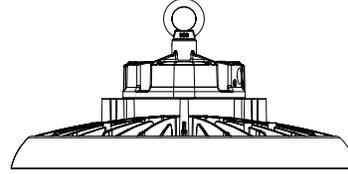

H17XL

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

HOOK MOUNTING

1. Screw the **Hook** into the **Fixture**, tighten and fix it. (Fig. 1)
2. Hang the **Fixture** on the **Ceiling Hook** or chain. (Fig. 2)
3. After installation, connect the wire of the fixture to the mains. Use appropriate UL approved wire connectors as required by code to complete wiring.

Fig: 1


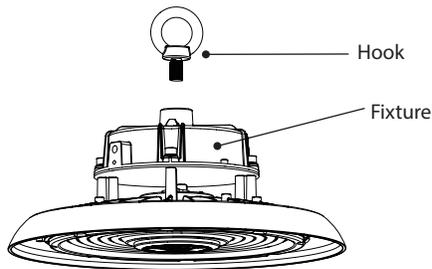


Fig: 2

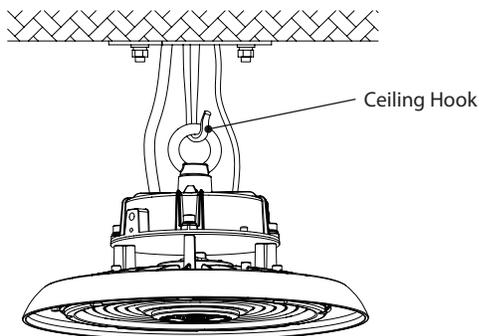

CEILING MOUNTING (WITH ACCESSORY KIT)

1. Mark with a pen or sharp tool on the mounting surface and drill.
2. Fix **Screws** into the holes with a hammer.
3. Align the **Bracket Holes** with **Screw Holes** (Fig. 3), push the **Fixture** to one side, and tighten **Screws**.
4. After installation, connect the wire of the fixture to the mains. Use appropriate UL approved wire connectors as required by code to complete wiring. By adjusting the bracket screws, users can adjust 50° to the left or right vertically. (Fig. 4).

Fig: 3


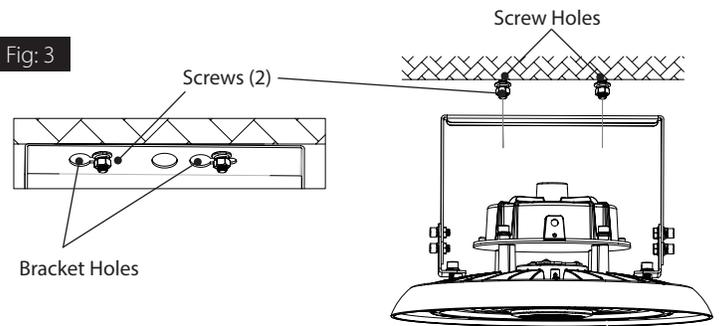


Fig: 4

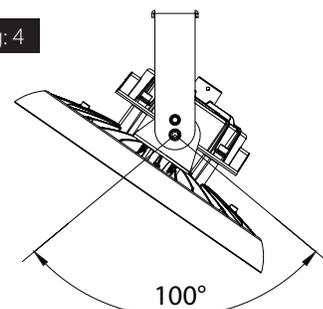

INSTRUCTIONS


H17 & H17XL INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


PENDANT MOUNTING (WITH ACCESSORY KIT)

1. Unscrew the **Nuts** on **1/2" NTP**. (Fig. 5)
2. Insert **1/2" NTP** stem into the **Bracket Hole** and re-screw the **Nuts**. (Fig. 6)
3. After installation, connect the wire of the fixture to the mains. Use appropriate UL approved wire connectors as required by code to complete wiring. By adjusting the bracket screws, users can adjust 50° to the left or right vertically. (Fig. 4).

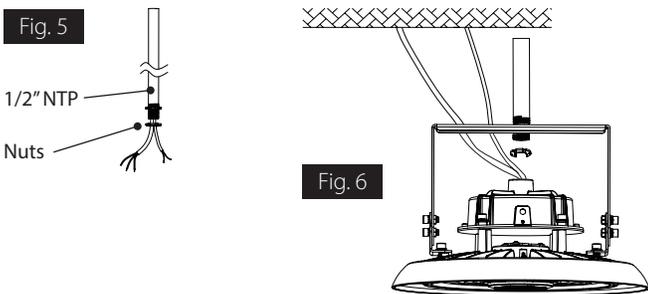

FIELD-ADJUSTABLE CCT & WATTAGE



1. The fixture has 2 selectable CCTs and 3 wattages. To access, remove the waterproof gasket, adjust the CCT and Power switches as needed.
Factory settings:
H17: 150W and 4000K
H17XL: 240W and 4000K

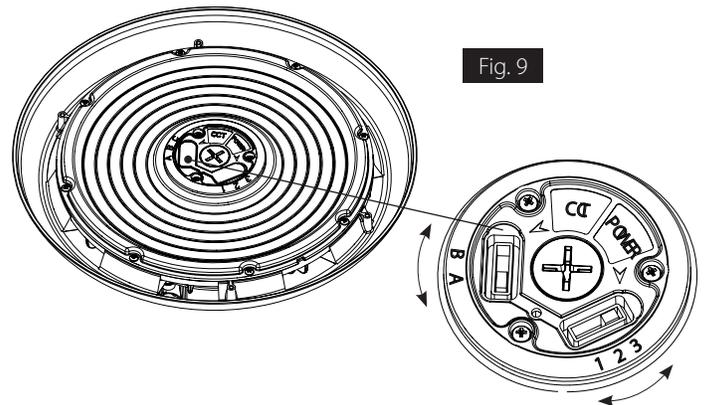

WIRING


RISK OF FIRE. Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. Drop down supply wires must be at least 9" long to allow fixture removal. For non-dimming (on/off), Electronic Low Voltage (ELV) and TRIAC dimming follow the wiring directions in Fig. 7. For 0-10V dimming, Fig. 8.

1. Connect the **GROUND** wire from fixture to supply ground.
2. Connect black fixture lead to (+) **LINE** supply lead.
3. Connect white fixture lead to (-) **COMMON** supply lead.

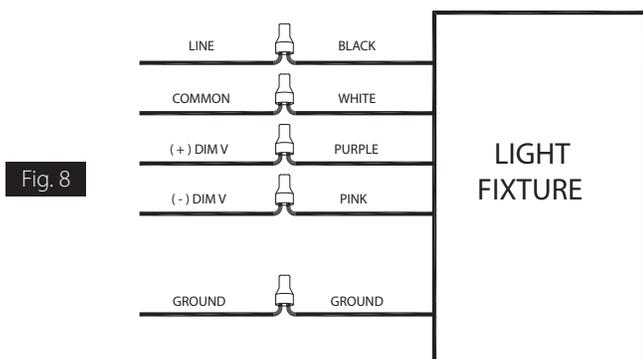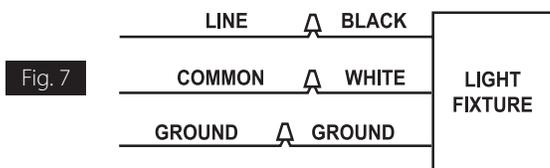

MOTION SENSOR INSTALLATION (PURCHASED SEPARATELY)

1. Unscrew the **1/2" Knockout** out with a screwdriver and screw the **Sensor Kit** on.

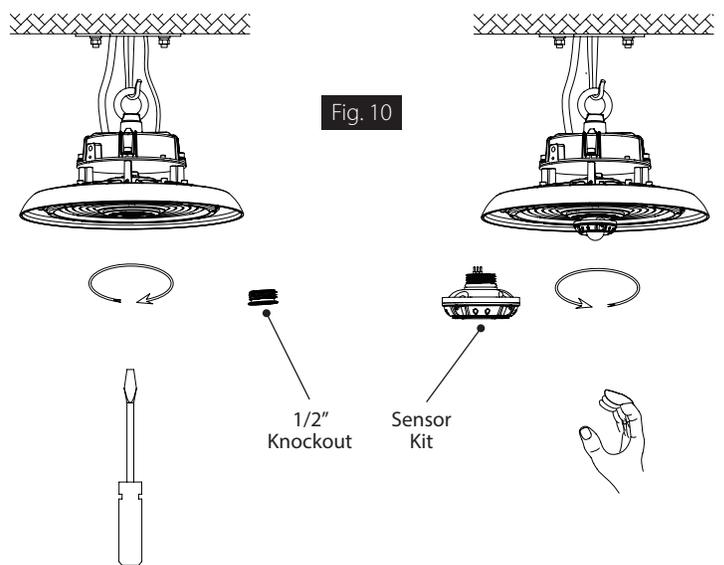

INSTRUCTIONS

H17 & H17XL INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

CLEANING & MAINTENANCE

CAUTION: *Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.*

1. Do not open fixture to clean the LED. Do not touch the LED.
2. Do not touch reflector, lens or trim cone.
3. Do not clean any fixture surface with wood-base cleaning material such as paper towels or tissues.

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

Note: *These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.*



© 2022 RAB LIGHTING Inc.

H17_H17XL-IN 1221
P-100099

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

RAB WARRANTY: *RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.*